

 KRAFTWERK HORN GMBH Werk Horn-Bad Meinberg	Arbeitsanweisung	Änd.-Stand 01.01.2020	Revision A
	Holzplatz Energiezentrale	Datei AA H-9000-55 Verhaltensregeln Holzplatz En.doc	Seite 1 von 1
erstellt: Herr Al-Thabit	Englisch	Freigabe: C.Lindke	

Rules of conduct lumber yard

- The truck may only be left to open or close the loading area. The driver must be within 2m of his truck. Always keep an eye on the wheel loader.
- The truck driver is in the cab when unloading.
- Only clean the loading area in the prescribed space.
- In the event of problems with the vehicle, you must first leave the wood yard and notify the wood acceptance department. You can reach them on +49 5234 206827 657.
- The timber acceptor at the scales must be confirmed that these points are understood and strictly adhered to.